



WARRANTY

- Our company warrants all the parts except for wooden sections for a period of 2 year.
- Maintenance and repair periods during warranty period will be added to the warranty period.
- The failures within 2 year from the initial sale date will be repaired by our company free of charge.
- This warranty will be valid if the customer performs his/her obligations completely according to the user's guide.
- Any failure arisen from misuse or improper use is not covered by this warranty.
- If any product repeats the same failure twice within warranty period or if its repair is not possible based on a report by our service, it will be replaced.
- Yıldız, produces quality with the image of "reliable trademark" Also, it is one of today's and future's leading establishments of Arms Industry. It serves everybody who like hunting, the nature, the crafts and sports with its large production range, by use of the ultimate possibilities of labor and technology.
- It has an understanding of giving priority to the principle of total quality and standardization of parts in production, to provide the best services, warranties and price stability in marketing with the highest comprehension of responsibility.
- Congratulations! You have one of our high quality guns.



The barrel and firing group are found detached in the case.



Push the latch up by your thumb and detach the stock from the barrel by your other hand.



Push the folding latch to the right.



Place the barrel in the receiver carefully and gently.



Attach the stock first to the receiver and then to the barrel properly and then press it strongly.




Now your gun is ready to operate.

SAFETY

- The safety button is directly incorporated into the trigger and it is located on the breech-top of the receiver.
- You can use it easily by your thumb. You should see the mark "S" in the front of the safety button in order to be sure that the shotgun is in safety mode.
- In single-trigger models, you can fire the right or the left cartridge first, as you may wish. When the shotgun is in safety mode, turn the safety button to the right (then put it in fire mode) to fire the first shot through the right barrel and the second shot through the left barrel. When your shotgun is in safety mode, turn the safety button to the left (then put it in fire mode) to fire the first shot through the left barrel and the second shot through the right barrel. In double-trigger models, the front trigger fires the shot through the right barrel and the rear trigger fires the shot through the left barrel.
- The front trigger is generally used in broad spaces while the rear trigger is used in narrow spaces.

LOADING THE SHOTGUN

- Put the shotgun in safety mode.
- Place the cartridges in the chambers and unfold the shotgun.
- Your gun is ready to fire.


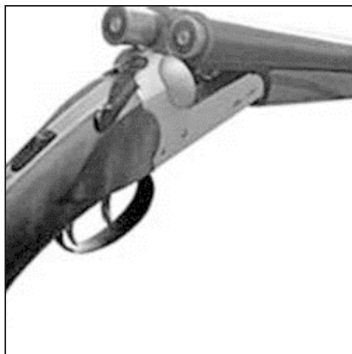


MAINTENANCE AND CLEANING RULES

- Keep your shotgun empty unless you require to load it.
- Do not trigger your shotgun when it is empty.
- Put your shotgun in safety mode when you load it.
- Do not aim your shotgun at living beings and residential areas when you load it.
- Do not load your shotgun indoors.
- Do not leave your shotgun in any place, when it is loaded.
- If you quit firing after you load your gun, unload the cartridges carefully.

DISMANTLING THE SHOTGUN

- Push the folding latch to the right and detach the barrel from the firing assembly.
- Attach the stock to the barrel.

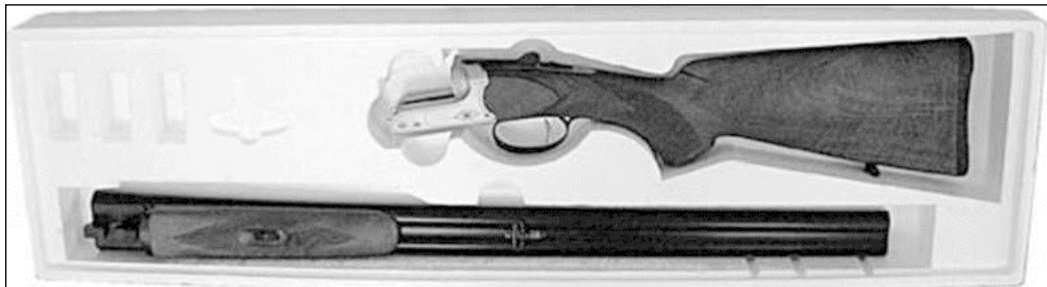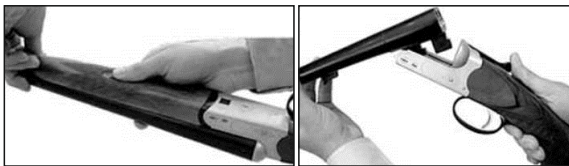

- Place the shotgun in its case after maintenance and cleaning.
- Lubricate inside the barrel by a ramrod with a piece of cloth impregnated with sufficient amount of gun lubricant and then clean it properly.
- Dry inside the barrel with a clean piece of cloth. Ensure that no foreign substances are left inside the barrel.
- Lubricate the surface of the barrel and other parts with the same gun lubricant and then dry them properly.
- Keep your gun away from dust, wet and acid.